

## MAGNETIC PICK-UP DIP SWITCH CHART

NUMBER OF TEETH ON FLYWHEEL	CLOSE SWITCH
80	-
81	7,8
82	6,7,8
83	5,7,9
84	5,6,7,10
85	3,7
86	3,6,10
87	3,6,7,8,9
88	3,5,7,8
89	3,5,6,7
90	3,4,6,8
91	3,4,5
92	3,4,5,7,8
93	2,7
94	2,6
95	2,6,7,8
96	2,5,8
97	2,4
98	2,4,8,9,10
99	2,3,9
100	2,3,7,8,10
101	2,3,6,8
102	2,3,6,7,8,9
103	2,3,5,7,10
104	2,3,4
105	2,3,4,7,9
106	2,3,4,6,10
107	2,3,4,6,7,9
108	2,3,4,5,10
109	2,3,4,5,7,9
110	2,3,4,5,6,10
111	2,3,4,5,6,7,9
112	1,6,10
113	1,6,7,10
114	1,5
115	1,5,7,10
116	1,5,7,8,9
117	1,4,7
118	1,4,7,8,10
119	1,3,9

NUMBER OF TEETH ON FLYWHEEL	CLOSE SWITCH
120	1,3,7,9
121	1,3,7,8,9,10
122	1,3,6,7
123	1,3,6,7,8,10
124	1,3,5,9
125	1,3,5,7,9
126	1,3,4
127	1,3,4,7
128	1,3,4,7,8
129	1,3,4,6,10
130	1,3,4,6,7
131	1,3,4,6,7,8
132	1,3,4,5,10
133	1,3,4,5,7
134	1,3,4,5,7,8
135	1,3,4,5,6,10
136	1,3,4,5,6,7
137	1,3,4,5,6,7,8
138	1,2,6,10
139	1,2,6,8
140	1,2,6,7,8
141	1,2,6,7,8,9,10
142	1,2,5,9
143	1,2,5,7,10
144	1,2,5,7,8,10
145	1,2,5,6,10
146	1,2,5,6,8,10
147	1,2,5,6,7,9,10
148	1,2,5,6,7,8,9
149	1,2,4,6,9
150	1,2,4,6,8,9
151	1,2,4,6,7,9,10
152	1,2,4,6,7,8,9,10
153	1,2,4,5,9
154	1,2,4,5,8,9
155	1,2,4,5,7,9,10
156	1,2,4,5,7,8,9,10
157	1,2,4,5,6,9
158	1,2,4,5,6,8,10
159	1,2,4,5,6,7,9,10


NUMBER OF TEETH ON FLYWHEEL	CLOSE SWITCH
160	1,2,4,5,6,7,8,9
161	1,2,3,5,6,10
162	1,2,3,5,6,9,10
163	1,2,3,5,6,8,9,10
164	1,2,3,5,6,7,8,10
165	1,2,3,5,6,7,8,9,10
166	1,2,3,4,6,9
167	1,2,3,4,6,8,10
168	1,2,3,4,6,8,9,10
169	1,2,3,4,6,7,8,10
170	1,2,3,4,5,10
171	1,2,3,4,5,9,10
172	1,2,3,4,5,8,9
173	1,2,3,4,5,7,9,10
174	1,2,3,4,5,7,8,9
175	1,2,3,4,5,6,10
176	1,2,3,4,5,6,9,10
177	1,2,3,4,5,6,8,9
178	1,2,3,4,5,6,8,9,10
179	1,2,3,4,5,6,7,8,10
180	1,2,3,4,5,6,7,8,9,10

## ALTERNATOR INPUT DIP SWITCH CHART

NUMBER OF ENGINE CYLINDERS OR ALTERNATOR POLES	OPEN SWITCH
4	1,2
6	2,3
8	2
10	4,5
12	4
20	6

SWITCH POSITIONS

1 THRU 8 ARE SHOWN IN THE OPEN POSITION

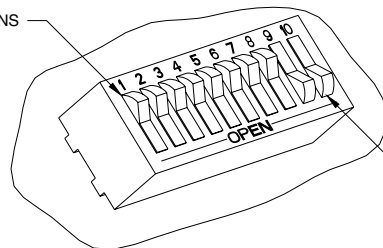

SWITCH POSITIONS 9 AND 10 ARE SHOWN IN THE CLOSED POSITION

RANGING SWITCH SETTING DETAIL